


2" foam


THE HARD WAY
 This method requires highest quality plywood (finish or Baltic birch with many plies)

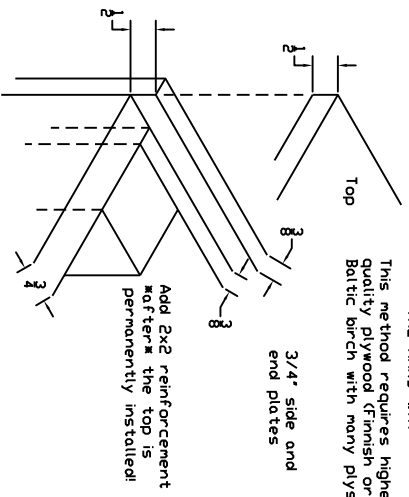

3/4" side and end plates

Add 2x2 reinforcement after the top is permanently installed!

AN EASIER WAY

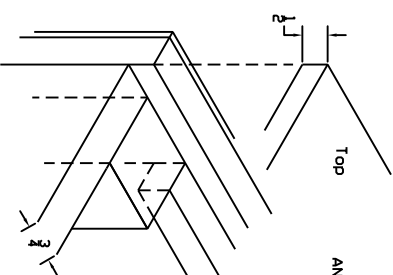

Top